

DEMAR WALLCOVERING







CS PLUS INTERTRADE บริษัท ซีเอส พลัส อินเตอร์เทรด จำกัด 63/2526 Soi Rat Phatthana 5, Saphan Sung, Bangkok Thailand 10240

DEMAR WALLCOVERING

FABRIC BACKED VINYL TYPE I



Physical Properties

Weight: 15oz. PLY

Roll Size: 52-54" x 30yds

Backing: Sheeting

Environmental and Health

DEMAR WALL is an environmentalgreen product as it has eliminated all heavy metals such as lead, mercury, cadmium and chromium.

Batching


Since slight variation in color may occur between different production batches, it is important in one single area, rolls from the same production batch are used.

Our Service

The imported wallpaper will be sold as well as customized installation services under the terms of the company.





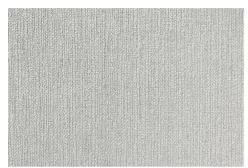

Roll Size: 52-54" x 30yds

Weight: 15oz. PLY Backing: Sheeting





Roll Size: 52-54" x 30yds

Weight: 15oz. PLY Backing: Sheeting

WVA5202



Roll Size: 52-54" x 30yds

Weight: 15oz. PLY Backing: Sheeting

RYS27156



Roll Size: 52-54" x 30yds

Weight: 15oz. PLY Backing: Sheeting

WVA5205



Roll Size: 52-54" x 30yds

Weight: 15oz. PLY Backing: Sheeting







CS PLUS INTERTRADE บริษัท ชีเอส พลัส อินเตอร์เทรด จำกัด 63/2526 Soi Rat Phatthana 5, Saphan Sung, Bangkok Thailand 10240

INSTALLATION

Hang the first strip to a plumb line, overlapping the ceiling and baseboard, within 12 minutes of paste application.

Use a stiff bristle brush to ensure that the wallcovering makes contact with the wall. A plastic smoother can also be used on non-metallic Vinyls, providing only light pressure is applied (do not use sharp-edged tools). Smooth from the middle to the outside edges, being careful not to stretch the material, and work out all air bubbles. Trim at the ceiling and baseboard with a sharp razor blade. For matched patterns, butt the second strip to the edge of the first and smooth out firmly. When double cutting non-matching patterns, place a 2-3" wide strip behind the seam to avoid scoring the wall. Flatten seams exerting light pressure with a seam roller. Low- adhesive painter's tape can be used to keep the face of the seams clean. Before applying the next strip, trim the top and bottom as with the first panel, and proceed in the same manner around the room.

Avoid cutting narrow widths of material for placement above doors and below windows. Vertical joints should not occur less than six inches from inside or outside corners. When trimming at chair rails and ceilings, always use a broad knife rather than a straight edge. Take extra care in keeping the adhesive off the face of the wallcovering. Remove excess adhesive immediately with a natural sponge, frequently rinsed in clear, warm water, and dry with a soft, lint free cloth. After installation, the walls and wallcovering should be monitored for potential moisture or vapour infiltration, which must be promptly eliminated.







CS PLUS INTERTRADE บริษัท ซีเอส เมลัส อินเตอร์เทรด จำกัด 63/2526 Soi Rat Phatthana 5, Saphan Sung, Bangkok Thailand 10240



Performance



















CS PLUS INTERTRADE บริษัท ซีเอส พลัส อินเตอร์เทรด จำกัด 63/2526 Soi Rat Phatthana 5, Saphan Sung, Bangkok Thailand 10240